


PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013

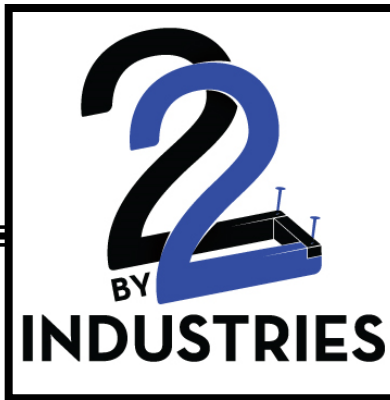

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com




15' GAGA BALL PIT FLOOR

INSTALLATION INSTRUCTIONS

PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013




O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

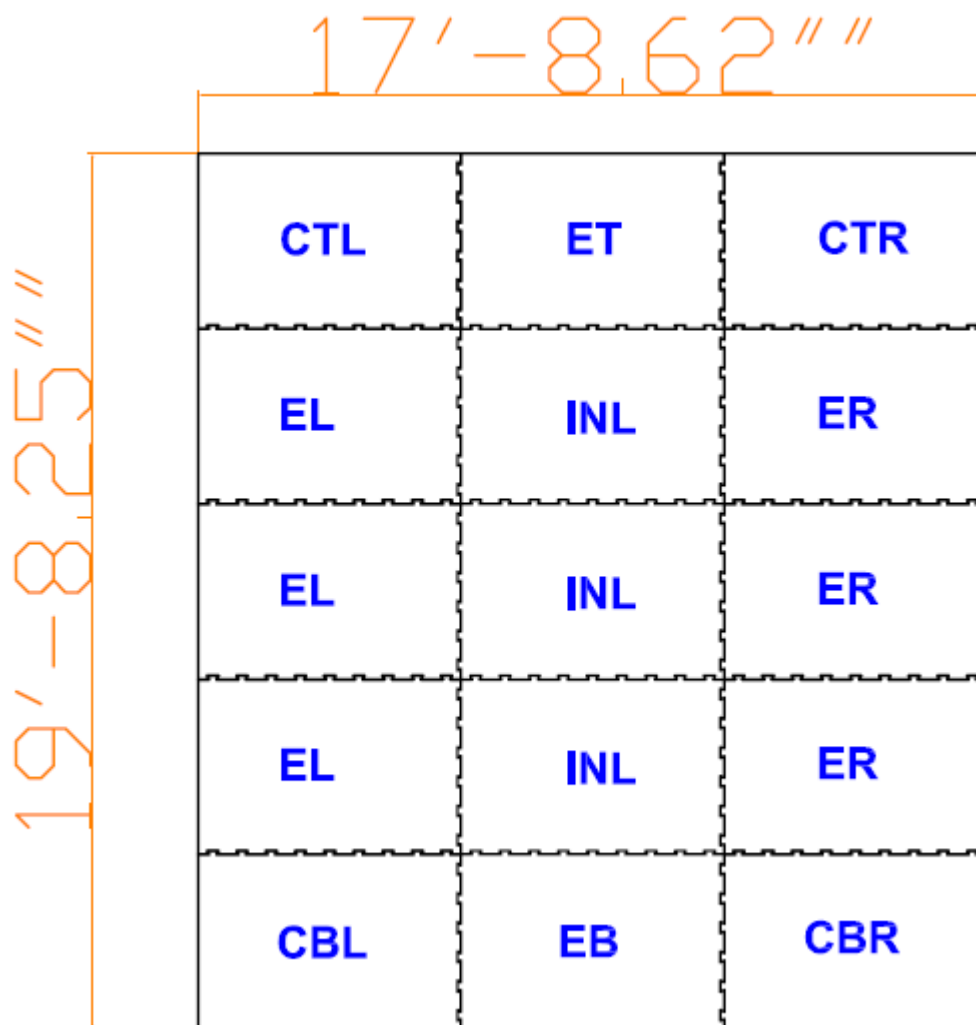

1. Choose a large, flat area that is free from dips, mounds, and debris.
2. Begin with one of the corners labeled CTL, CBL, CTR, or CBR. These are your corner pieces.
3. Follow the guide, pictured above, when placing each labeled mat. You will need a rubber mallet to assist the process of interlocking the mats with each other.
4. Once you complete the grid, you are ready to construct or move your Gaga Ball Pit onto the new floor.
5. Enjoy your 15' Gaga Ball Pit!

PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013

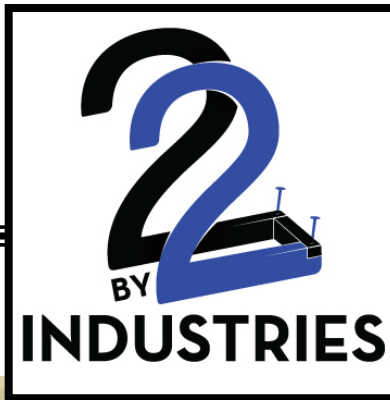

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com




20' GAGA BALL PIT FLOOR

INSTALLATION INSTRUCTIONS

PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013




O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

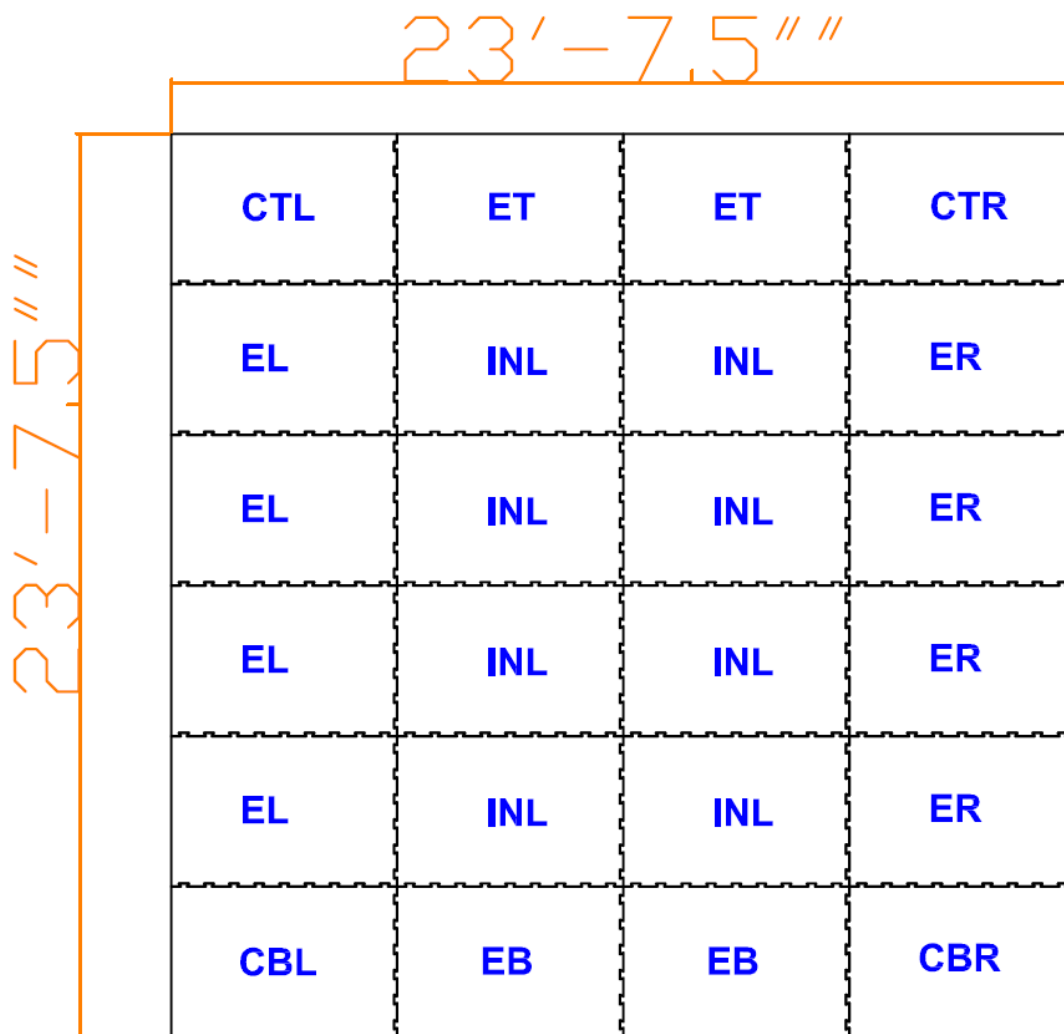

1. Choose a large, flat area that is free from dips, mounds, and debris.
2. Begin with one of the corners labeled CTL, CBL, CTR, or CBR. These are your corner pieces.
3. Follow the guide, pictured above, when placing each labeled mat. You will need a rubber mallet to assist the process of interlocking the mats with each other.
4. Once you complete the grid, you are ready to construct or move your Gaga Ball Pit onto the new floor.
5. Enjoy your 20' Gaga Ball Pit!

PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013

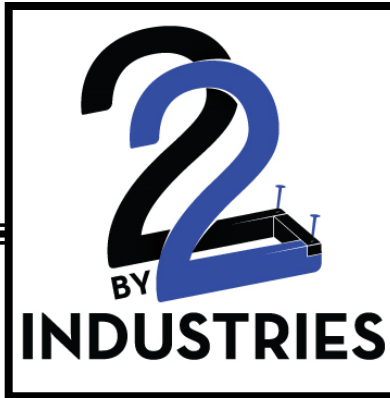

O: 877-234-6558
F: 405-607-0624
info@2by2ind.com




26' GAGA BALL PIT FLOOR

INSTALLATION INSTRUCTIONS

PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013



O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

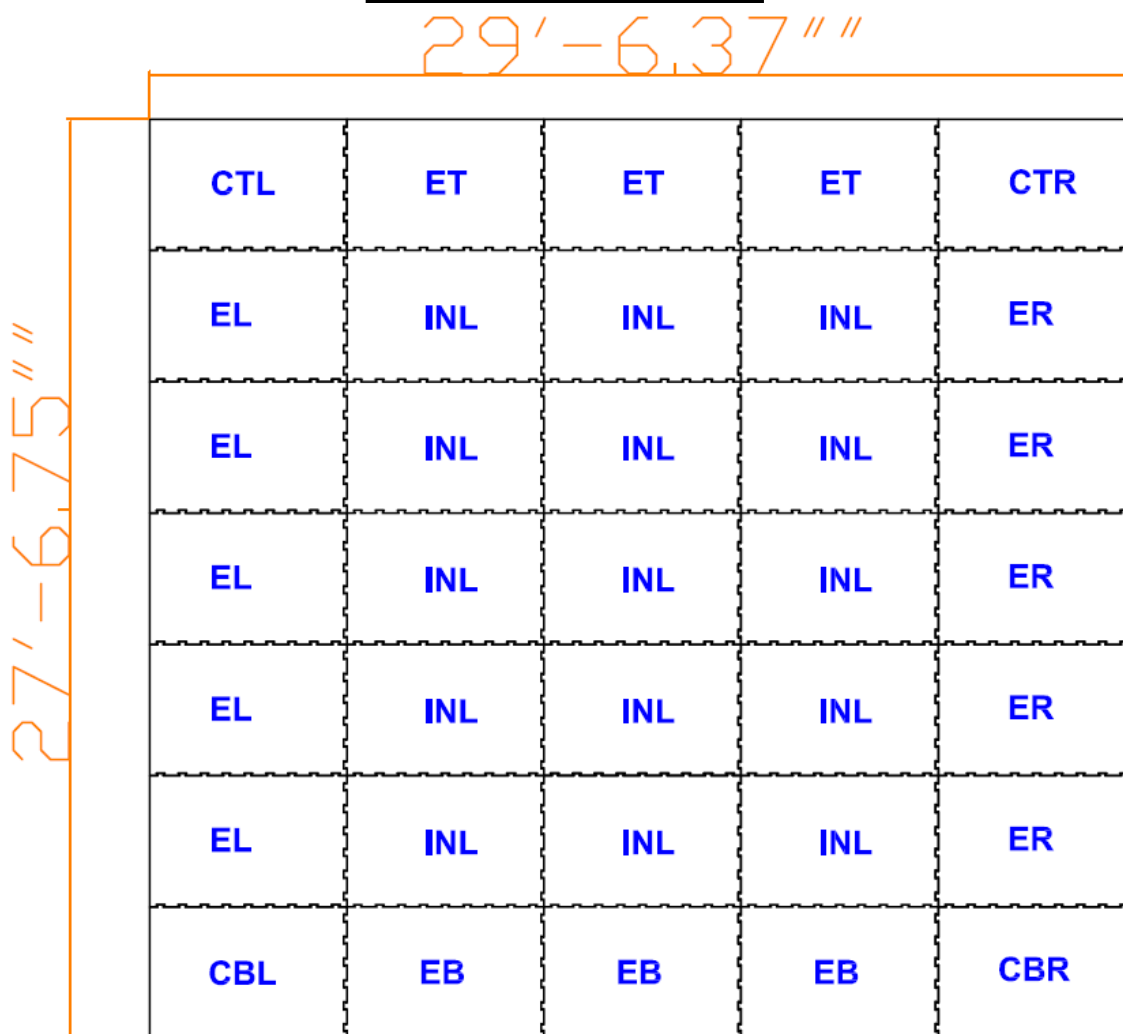

1. Choose a large, flat area that is free from dips, mounds, and debris.
2. Begin with one of the corners labeled CTL, CBL, CTR, or CBR. These are your corner pieces.
3. Follow the guide, pictured above, when placing each labeled mat. You will need a rubber mallet to assist the process of interlocking the mats with each other.
4. Once you complete the grid, you are ready to construct or move your Gaga Ball Pit onto the new floor.
5. Enjoy your 26' Gaga Ball Pit!