

PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013



O: 877-234-6558
F: 405-607-0624
info@2by2ind.com



TURF TIMBER

INSTALLATION INSTRUCTIONS



Watch Install Videos


PO Box 7987
Edmond, OK 73083
14710-A Metro Plaza Blvd
Edmond, OK 73013



O: 877-234-6558
F: 405-607-0624
info@2by2ind.com

Here are five simple steps to assist with installation of the Turf Timber with Artificial Turf Safety Surfacing:

1. Using the integrated snap feature, connect your Turf Timbers together to create the perimeter of your play area.
2. Once your perimeter has been placed and determined, following any or all applicable fall zone guidelines, hammer the (2) 20" spikes through each Turf Timber into the ground to secure them in place.
3. Now that your perimeter is set, set the crushed stone sub base according to the manufacturer recommended depth.
4. Place the impact-attenuating shock pad on top of the sub-base and rest it on the Turf Timber shelf.
5. Tightly stretch the artificial turf and secure it to the Turf Timber using staples or manufacturer approved fasteners.

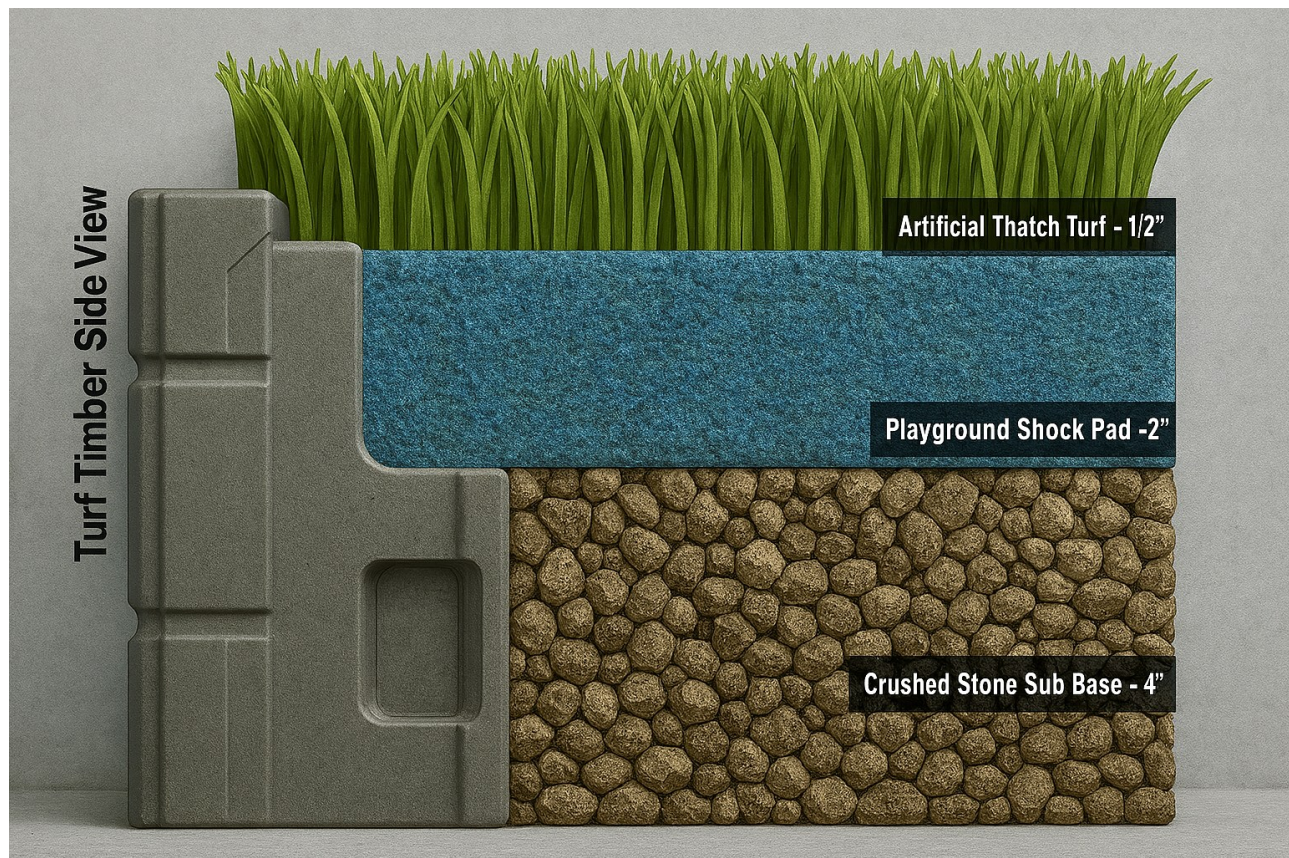

There is nuance to installing artificial turf safety surfacing for a playground area, consult the turf provider with any questions regarding their product. See QR Code for applicable videos for Turf Timber.